


# Smart Door Lock User Manual

## Security mode

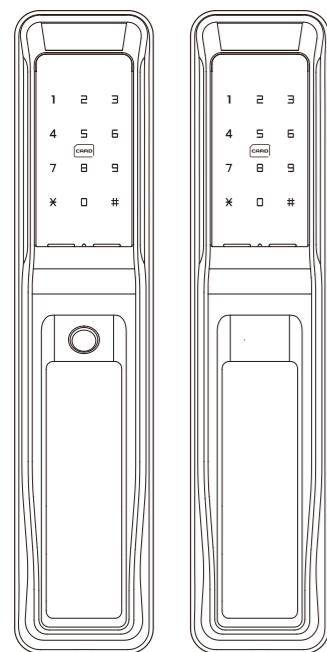

**General Mode** Generally used mode, basic default from factory

**Security Mode** Security-enhanced mode by adding supervision function  
Provide Individual Registration/Deleting functions which are not available to General mode

### 1. ICON

**RP** Password    **AP** Supervisor Password    **ADD RESS** User's no.    Key pad Touch

**(R)** Registration Button    **[\*]** Button    **#** [#] Button    Smart Key

Fingerprint    Remote controller    Double Locking Button

99(#1~#99) user's no. can be registered.  
Reverting range when you press **[\*]** button for additional settings

### 2. Switch to General Mode/Security Mode

#### Switch from general mode to security mode

	1	2	3	4	5	6	7	8	9	10	11	12
General Mode		<b>RP</b>	<b>(R)</b>	<b>0</b>	<b>#</b>	<b>AP</b>	<b>#</b>	<b>AP</b>	<b>(R)</b>			

NEW Repeat

#### Switch from security mode to general mode

Security Mode	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>7</b>	<b>#</b>	<b>RP</b>	<b>#</b>	<b>RP</b>	<b>(R)</b>			
---------------	------------	-----------	----------	----------	----------	-----------	----------	-----------	------------	--	--	--

NEW Repeat

Press the [Safety Lock] button and register while the deadbolt is out.

### 3. Registration

#### Supervisor Password

	1	2	3	4	5	6	7	8	9	10	11	12
Change	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>8</b>	<b>3</b>	<b>(R)</b>	<b>AP</b>	<b>(R)</b>				

NEW

#### User's Password

Register up to 3 passwords

Registration					<b>1</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>	<b>RP</b>	<b>[*]</b>	<b>(R)</b>	
Individual deletion	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>1</b>	<b>#</b>	<b>3</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>	<b>[*]</b>	<b>(R)</b>	
Delete All					<b>0</b>							5 sec

When switching from General mode to security mode, the user password is [1] [2] [3] [4] [5] [6] [7] [8] [9] [0].

**RP** Password    **AP** Supervisor Password    **ADD RESS** User's no.    **[\*]** Continuously (Additional Registration)

99(#1~#99) user's no. can be registered.  
Reverting range when you press **[\*]** button for additional settings

#### Smart Key

Register up to 100 keys

	1	2	3	4	5	6	7	8	9	10	11	12
Registration						<b>1</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>	<b>CARD</b>	<b>[*]</b>	<b>(R)</b>
Individual deletion	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>2</b>	<b>#</b>	<b>3</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>	<b>[*]</b>	<b>(R)</b>	
Delete All					<b>0</b>							5 sec

#### Fingerprint

Register up to 100 fingerprints

Registration						<b>1</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>		<b>[*]</b>	<b>(R)</b>
Individual deletion	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>3</b>	<b>#</b>	<b>3</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>	<b>[*]</b>	<b>(R)</b>	
Delete All					<b>0</b>							5 sec

#### Wireless Communication Pack

Register up to 10

Registration						<b>1</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>		<b>[*]</b>	<b>(R)</b>
Individual deletion	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>4</b>	<b>#</b>	<b>3</b>	<b>#</b>	<b>ADD RESS</b>	<b>#</b>	<b>[*]</b>	<b>(R)</b>	
Delete All					<b>0</b>							5 sec

#### One-Time Use password

Once this password is used, deleted automatically

Setting						<b>1</b>	<b>#</b>	<b>RP</b>	<b>(R)</b>			
Release	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>5</b>	<b>#</b>	<b>0</b>						5 sec

#### Delete All Registered Items

Delete All	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>6</b>	<b>#</b>	<b>AP</b>	<b>(R)</b>					
------------	------------	-----------	----------	----------	----------	-----------	------------	--	--	--	--	--

\* Factory reset with password 1,2,3,4,5,6,7,8,9,0

### 4. Settings

#### Dual Security Mode Setting/Release

Unsetting from Factory

	1	2	3	4	5	6	7	8	9	10	11	12
Setting				<b>1</b>	<b>4</b>	<b>(R)</b>						
Release	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>3</b>	<b>6</b>	<b>(R)</b>						

#### Double recognition mode Setting/Un-setting

Unsetting from Factory

Setting				<b>5</b>	<b>1</b>	<b>(R)</b>						
Release	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>5</b>	<b>2</b>	<b>(R)</b>						

#### Auto/Manual Lock setting

Auto lock mode from Factory

Auto				<b>3</b>	<b>(R)</b>							
Manual	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>6</b>	<b>(R)</b>							

#### Smartphone Validation(BLE) Mode Setting/Release

Unsetting from Factory

Setting				<b>4</b>	<b>1</b>	<b>(R)</b>						
Release	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>4</b>	<b>2</b>	<b>(R)</b>						

#### Volume Control(6 steps include silence)

Step 4 Setting from Factory

Volume Down					<b>7</b>	<b>(R)</b>						
Silence	<b>(R)</b>	<b>AP</b>	<b>#</b>	<b>9</b>	<b>#</b>	<b>8</b>	<b>(R)</b>					
Volume Up					<b>9</b>	<b>(R)</b>						

### 5. Password Exposure Prevention(Entering Trick numbers)

Touch → Random numbers(Trick nos.) and password → **RP** → **[\*]**

\* 1~∞ Random numbers can be used

### 6. Etiquette Mode

**2초** Touch → **RP** or or or

\* This is one-time use only function so sound will be automatically on after once using this function.

### 7. Safety Lock Setting/Release

#### Setting Security Mode from Inside

Press (Double Locking) button on the inner body for 3 seconds to set the safety lock

#### Release Security Mode from Inside

Press (Double Locking) button on the inner body for 1 seconds to release the safety lock

#### Release Security Mode from Outside

Touch → **RP** → **#** → **RP** → **[\*]**

\* Open the door by pushing down the handle inside or press the security button once to release the double Locking

### 8. Locking the Door from Inside / Outside

#### When auto lock is set Locking the door from inside / outside

**3초** Default setting is auto lock so the door will be locked automatically in 3 seconds after it's closed.

#### When manual lock is set Locking the door from outside

Touch [Touchpad] for more than 2 seconds and the door will be locked.

#### Closing door from inside when manual lock is set.

When the manual lock is set, press the [Double Locking] button once shortly after the door close.

### 9. Opening the door from Outside

#### Opening the door with password

Touch → Entering password → Press **[\*]** button

The opening mode will be closed if you are not entering the password within 15 seconds after touching the key pad.

#### Opening the door with smart key

Touch the smart key receiver with the smart key.

#### Opening the Door Using Fingerprint

Touch the fingerprint receiver with your fingerprint.